


CONSTRUCTION DIAGRAMS
February 1, 2001

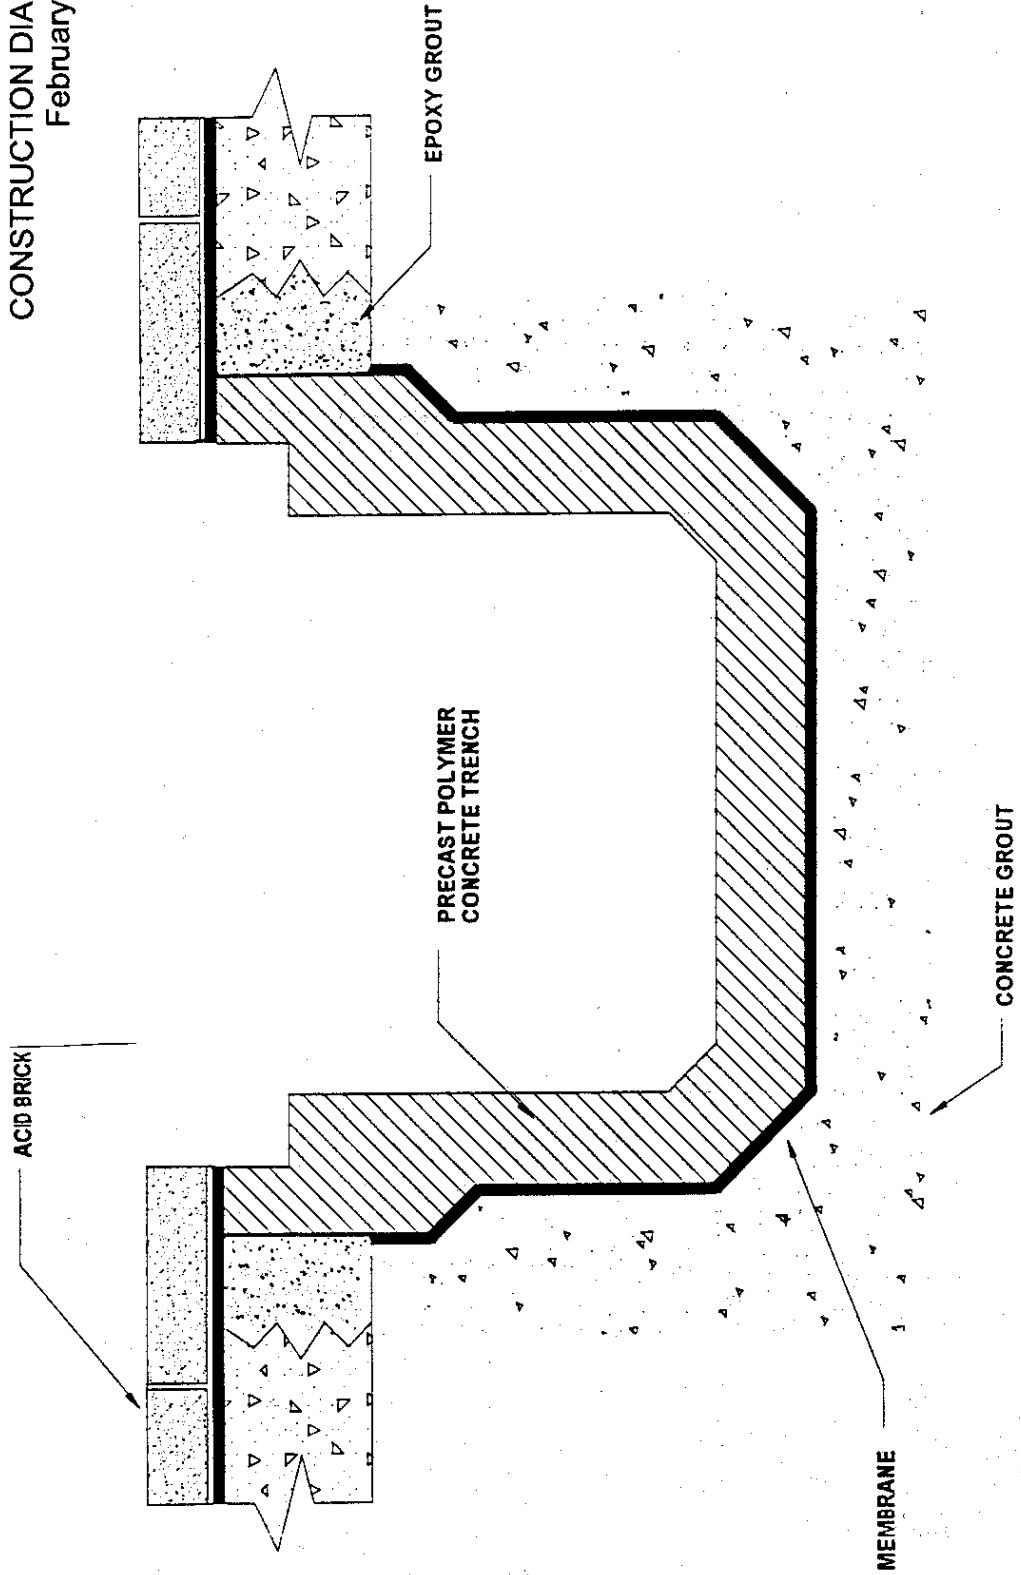

TRANSITION DETAIL: BRICK FLOOR TO
PRECAST TRENCH
(RETROFIT)

APD-1009



1450 Hoff Industrial Drive
O'Fallon, MO 63366
636-379-9119 fax 636-379-0388
www.blome.com e-mail info@blome.com