


CONSTRUCTION DIAGRAMS  
February 1, 2001

FILL JOINT TO FULL DEPTH IN FOOD SERVICE,  
SOLVENTS OR OXIDIZING ACID EXPOSURE. IN  
OTHER CHEMICAL SERVICE PLACE FOAM IN  
BOTTOM OF JOINT COVERED WITH 1/2"  
EXPANSION JOINT MATERIAL.

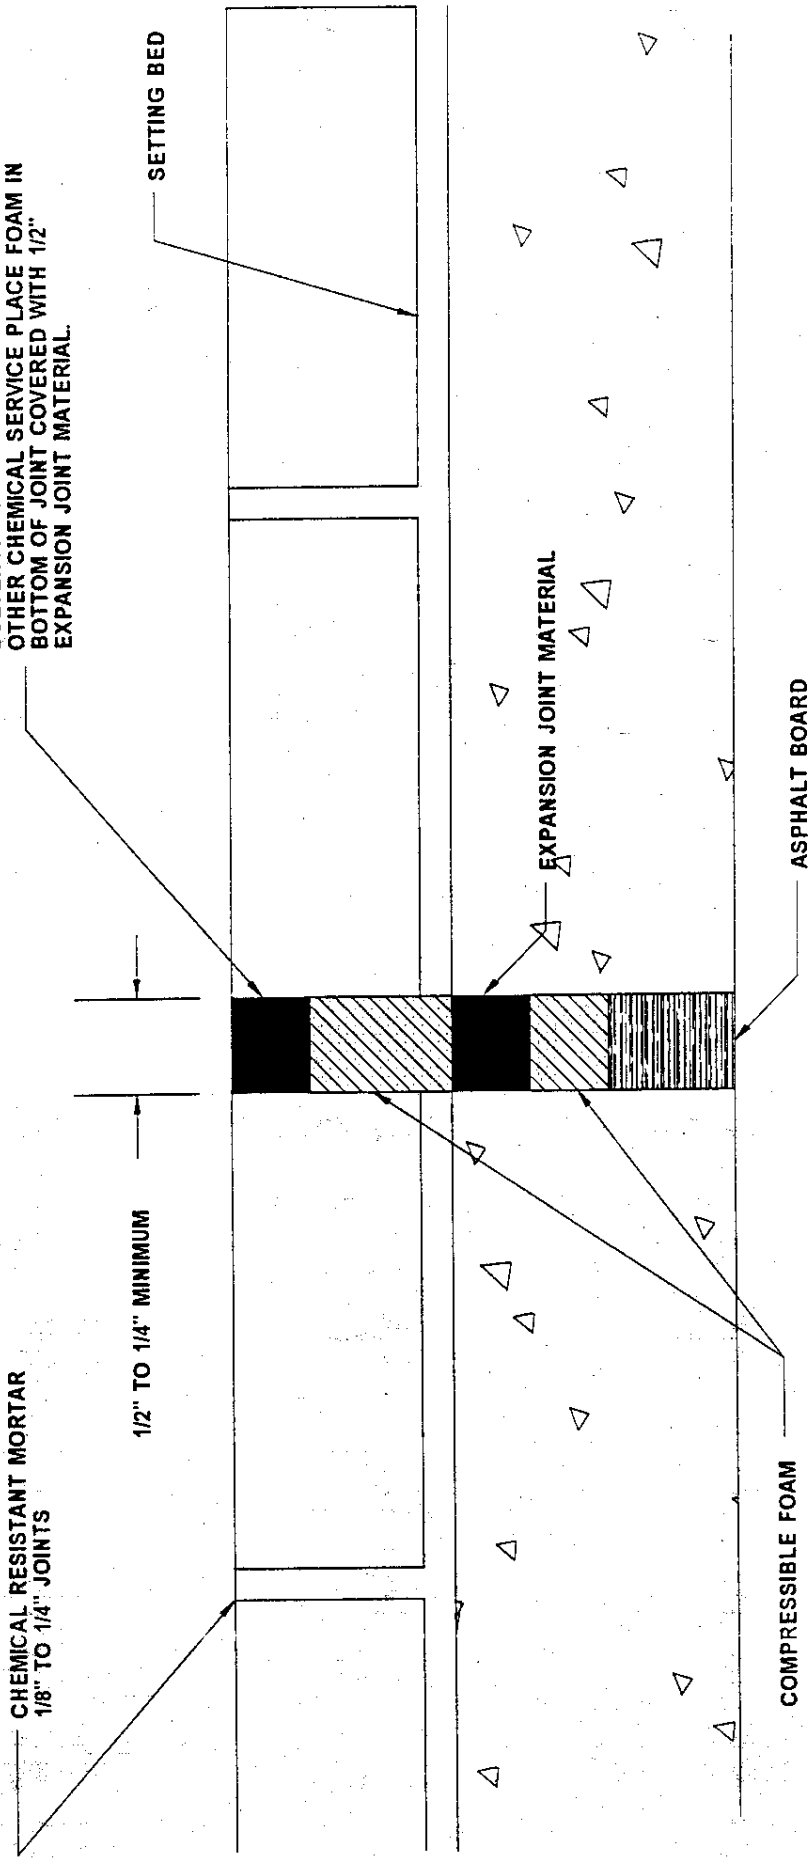

TYPICAL EXPANSION JOINT IN DIRECT BOND BRICK FLOORS

CPD-1015

**BLOME**  
INTERNATIONAL

1450 Hoff Industrial Drive  
O'Fallon, MO 63366  
636-379-9119 fax 636-379-0388  
[www.blome.com](http://www.blome.com) e-mail [info@blome.com](mailto:info@blome.com)