



EXISTING WORN FLOOR


CONSTRUCTION DIAGRAMS
February 1, 2001

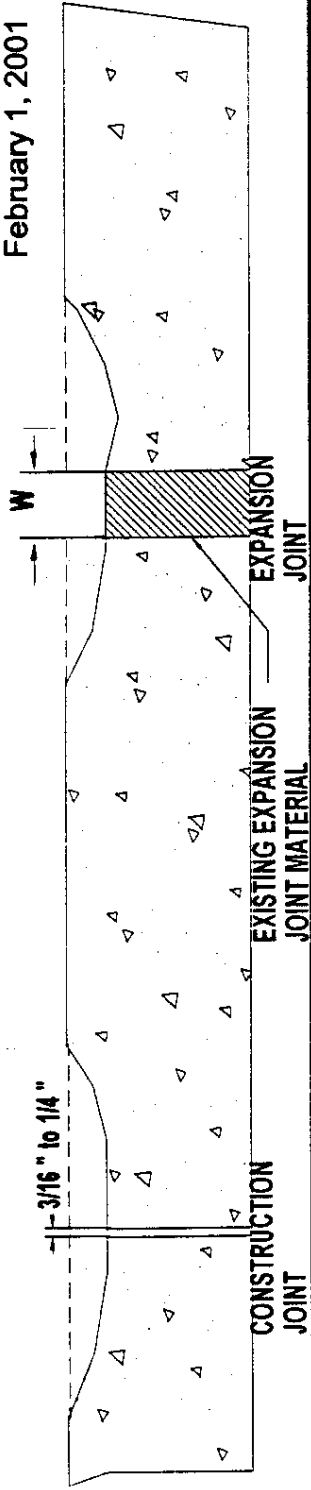

PREPARATION

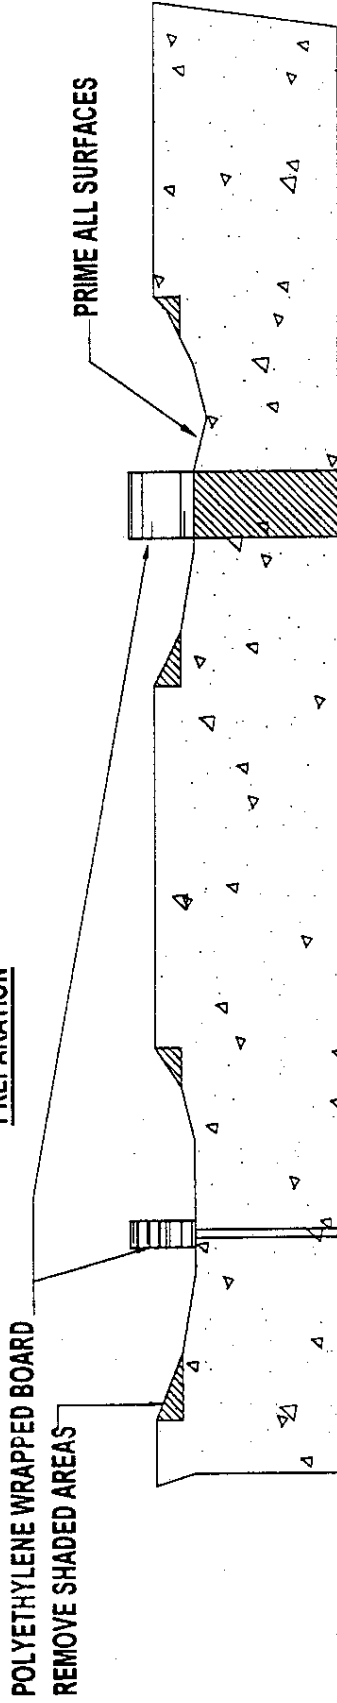

REPAIRS

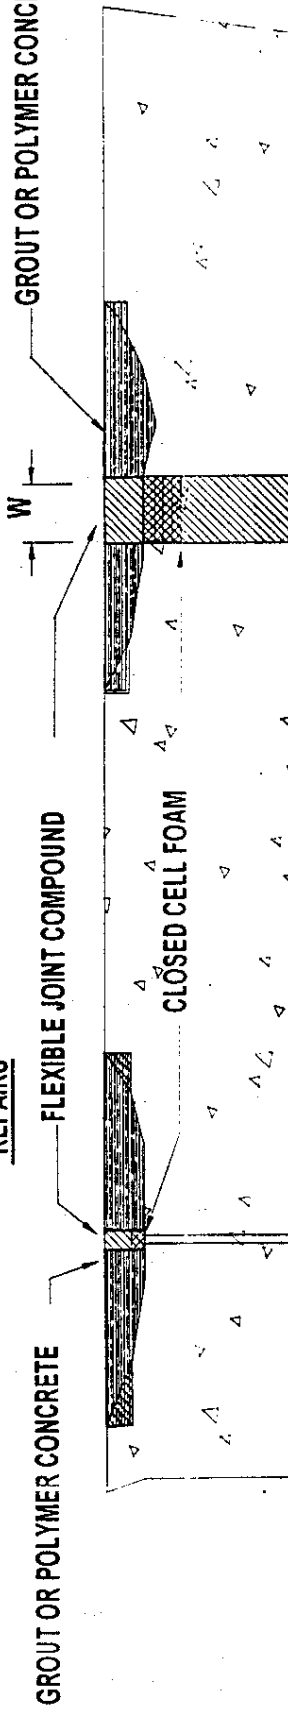

Depth of flexible joint compound 1/2" or 1/2 W

REPAIRS ON DAMAGED CONCRETE FLOORS

CPD-1028



1450 Hoff Industrial Drive
O'Fallon, MO 63366
636-379-9119 fax 636-379-0388
www.blome.com e-mail info@blome.com