


FILL JOINT TO FULL DEPTH IN FOOD SERVICE,
SOLVENTS OR OXIDIZING ACID EXPOSURE. IN
OTHER CHEMICAL SERVICE PLACE FOAM IN
BOTTOM OF JOINT COVERED WITH 1/2" "
EXPANSION JOINT MATERIAL.

POLYMER CONCRETE

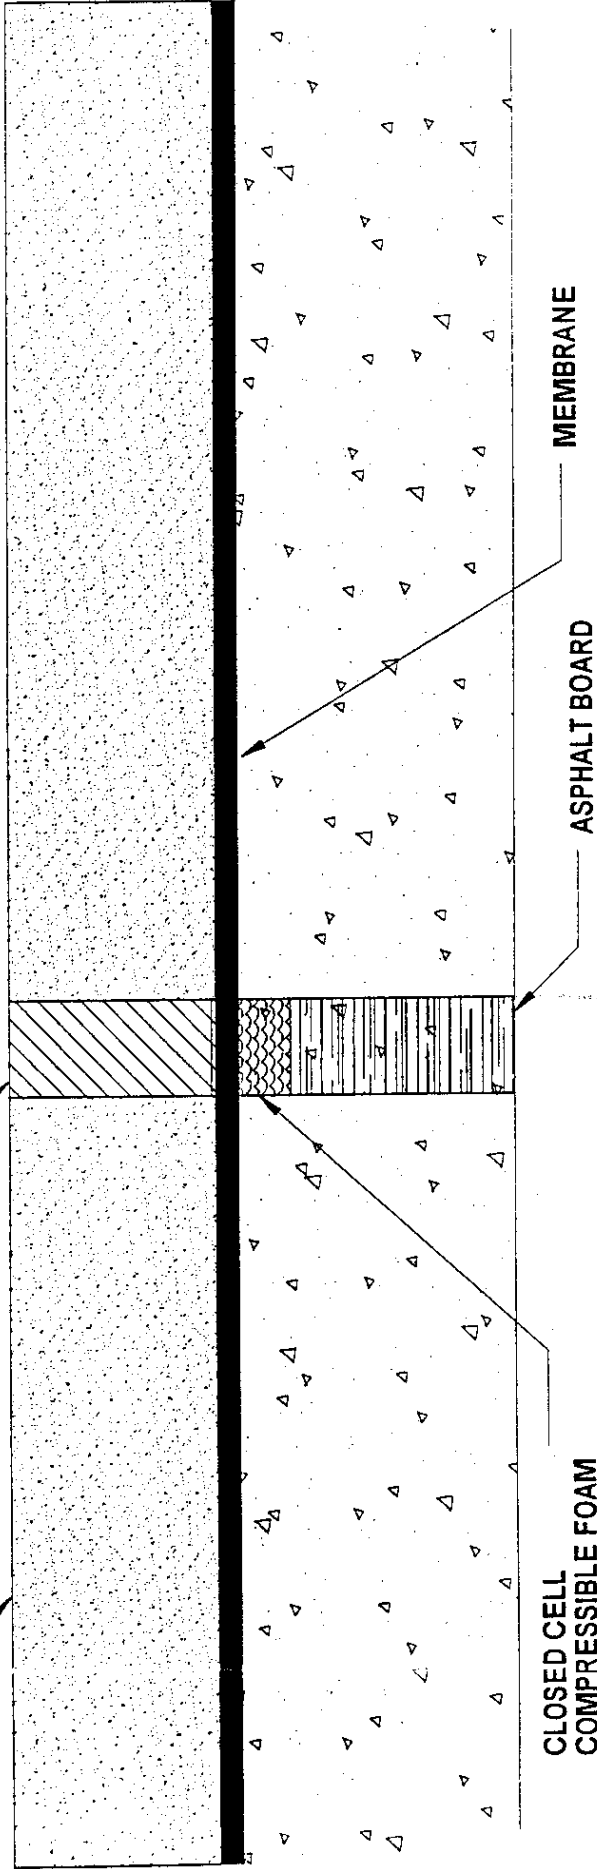

TYPICAL EXPANSION JOINT IN POLYMER CONCRETE FLOORS

CPD-1033

BLOME
INTERNATIONAL

1450 Hoff Industrial Drive
O'Fallon, MO 63366
636-379-9119 fax 636-379-0388
www.blome.com e-mail info@blome.com