


W 1 = WIDTH OF CONSTRUCTION JOINT  
W 2 = 1/2 WIDTH OF W 1  
W 3 = 1 TO 2 INCHES

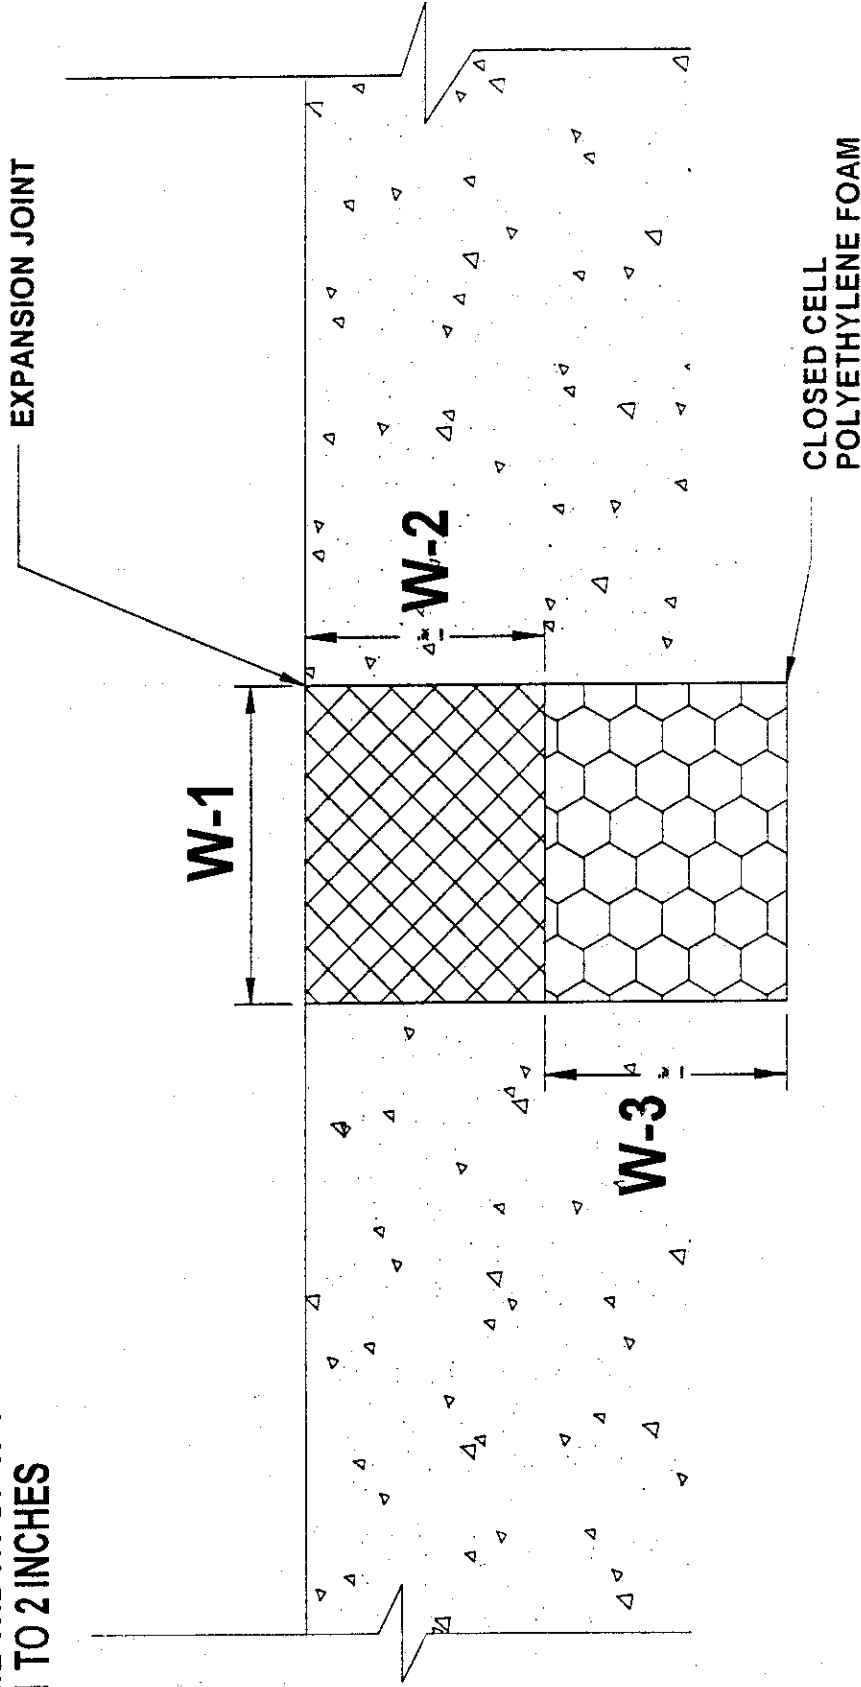

PREPARATION OF EXPANSION JOINTS  
IN CONCRETE FLOORS

ECD-1012



1450 Hoff Industrial Drive  
O'Fallon, MO 63366  
636-379-9119 fax 636-379-0388  
[www.blome.com](http://www.blome.com) e-mail [info@blome.com](mailto:info@blome.com)